


Programming Quick Guide

**- LS6302J/ LS6302JW/ LS6302K
/ LS6302L / LS6302M
/FS5022J/FS5022JW/FS5022K
/ FS5022L / FS5022M**

Installation

Make sure that the scanner has the correct cable to plug in the PC as below described::

***Note :** Please install PL-2303 driver for USB serial

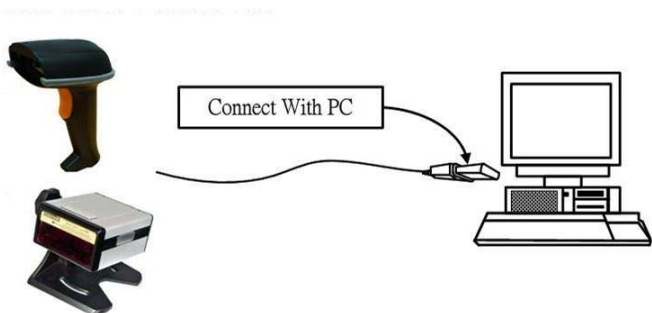

Reset Configuration to Default :

(For USB HID, RS232, USB Serial)

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan the following barcode. This will reset the scanner to its factory defaults.



Default

Keyboard Language (For USB HID Only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ` \ < > ~

North American
Standard USB
Keyboard



French
Windows



French Canadian
Windows 2000/XP



Spanish
Windows



Swedish
Windows



Japanese
Windows (ASCII)



German
Windows



French Canadian
Windows 95/98



French Belgian
Windows



Italian
Windows



UK English
Windows



Portuguese-
Brazilian Windows



Redundancy Level

This scanner offers two levels of decode redundancy. Select higher redundancy levels for decreasing levels of bar code quality. As redundancy levels increase, the decoder's aggressiveness decreases. Select the redundancy level appropriate for the bar code quality.



Redundancy Level 1

barcode must be successfully read twice before being decoded



Redundancy Level 2

barcode must be successfully read three times before being decoded:

1D Symbolgies -1



UPC-A



UPC-E



EAN-8



EAN-13



Code 128



ISBT 128



Code 39



**Trioptic
Code 39**



**Code 39
FULL ASCII**



1D Symbolologies -2



Code 32



CODE 93



CODE 11



Interleaved 25



Discrete 25



CODABAR



MSI



Chinese 25



1D Symbolologies -3



Matrix 25



Composite
CC-C



Composite
CC-A/B



Composite
TLC 39



GS1 DataBar



GS1 DataBar
Limited



GS1 DataBar
Expanded



2D Symbolologies



PDF 417



Micro
PDF 417



Data Matrix



Maxicode



OR CODE



Micro
OR CODE



Aztec



- Information in this document is subject to change without notice.
- For more information, please visit:
www.riotec.com.tw