



Quick Guide -DC9250DP

1 H92P

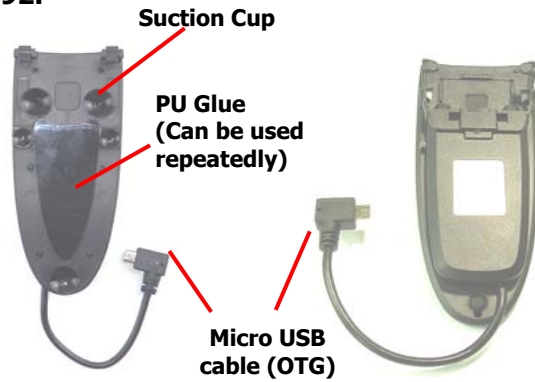

Connect to micro USB port of OTG device

2 H92P

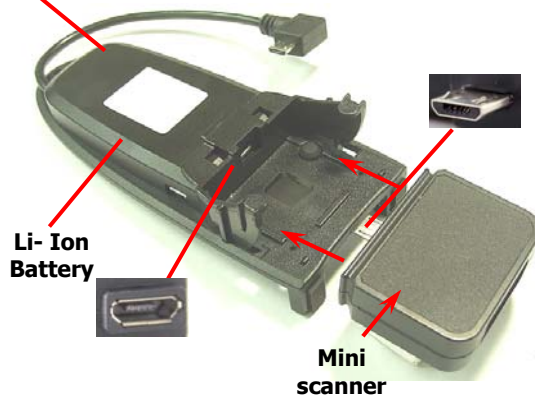


3

O = Operation mode C = Charge mode



- * Before you use scanner, please switch to "C" for battery charge for 3~4 hours.
- * Under "C mode", you can raise/lower soft-keyboard easily.(For USB HID only)

4

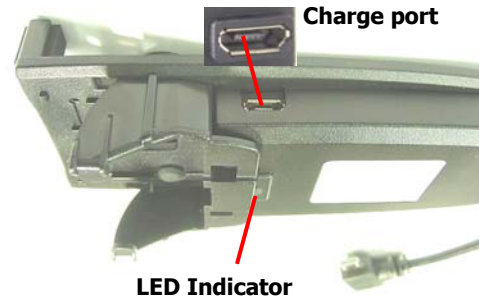

H92P Scan Holder is with Li-Ion battery inside. When in charging, please use the original USB power adaptor of OTG device (recommended). Through it, it charges both OTG device and H92P internal battery at the same time. When in low battery (Red LED flashing), please charge it immediately.

LED Indicator Information

Green LED OFF	Full charged (Charge mode)
Green LED ON	Charging (Charge mode)
Red LED Flashing	Low battery (Operation mode)

Attention: Under "Operation mode" please do not charging, otherwise the OTG device's battery will be charging back to H92P's battery.

5



Trigger Area



The touch sensor area is around the central area. (For both sides). Please check the above drawing for your reference.



Installation

Before using scanner, please make sure that the OTG device is fully charged.

1. Under USB HID interface
 - ** When plugged into OTG device, it will be recognized and begin to scan the barcode.
2. Under USB Serial interface
 - ** Please install PL-2303 driver into your OTG device first. PL-2303 driver can be downloaded from Google Play
 - ** Connect scanner to your OTG device, then, you can know which serial port scanner connects to.
 - ** The data you scan will be sent to serial port and your APP can get the data from serial port directly.

Reset Configuration to Defaults

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan the "Default" barcode. This will reset the scanner to its factory default. (scan from A1 to A6 for HID or B1 for USB Serial)



● **Note:** Please install PL-2303 driver for USB Serial.

Keyboard Country(For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States:
@ | \$ # { } [] = / ` \ < > ~



USA
(Original setting)



Norway



Germany



Sweden



Denmark



Switzerland



Italian



France



Vietnam



Spain



Portugal



Hungary

Barcode Configuration Method:

Please follow the below 4 steps to complete the "Symbologies Enable" or "Symbologies Disable"

 
1. Start Configuration
2. Choose one of 1D symbologies
3. Enable setting: scan Enable-1, then Enable-2
Disable setting: scan Disable-1, then Disable-2
4. End Configuration

Start Configuration



1D Symbologies – 1

UPC-A




UPC-E



**EAN-13
(ISBN/ISSN)**



 
EAN-8



**Industrial
2 of 5**



 **Matrix
2 of 5**



Enable-1



Disable-1



Enable-2



Disable-2



End Configuration



Barcode Configuration Method:

Please follow the below 4 steps to complete the "Symbologies Enable" or "Symbologies Disable"

1. Start Configuration
2. Choose one of 1D symbologies
3. Enable setting: scan Enable-1, then Enable-2
Disable setting: scan Disable-1, then Disable-2
4. End Configuration

Start
Configuration



1D Symbologies – 2

Code 93



Code 11



MSI/Plessey



UK/Plessey



Codabar



Code 128



UCC/EAN 128



ISBT 128




1D Symbologies – 3

Code 39
(Code 32)



 China Post




GS1 DataBar
Limited



Interleaved
2 of 5



 GS1 DataBar



GS1 DataBar
Expanded



Enable-1



Disable-1



Enable-2



Disable-2



End
Configuration



- Information in this document is subject to change without notice.
- For more information, please visit: www.riotec.com.tw