



Quick Guide -DC9252NP

1 H92P

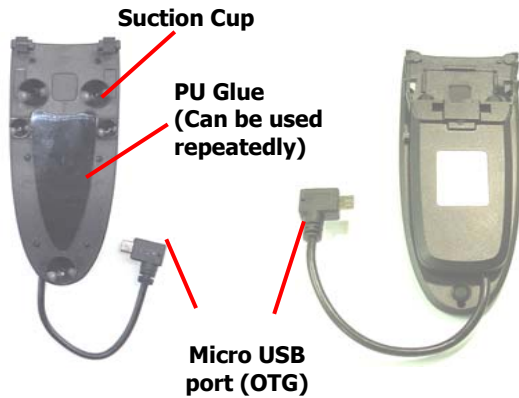


Connect to micro USB port of OTG device

2 H92P

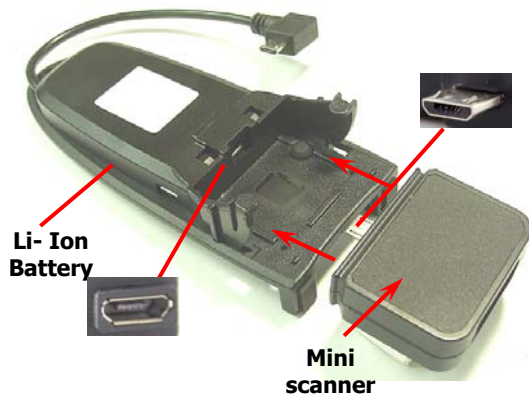


3

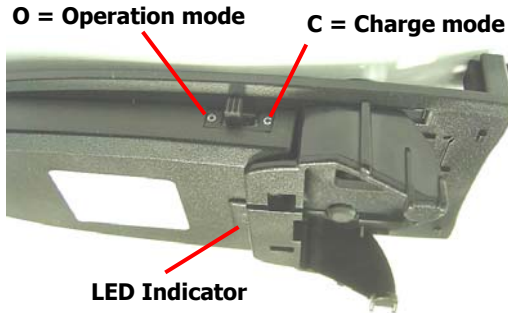

- * Before you use it, please switch to "C" for battery charge for 3~4 hours.
- * Under "C mode", you can raise/lower soft-keyboard easily.

4

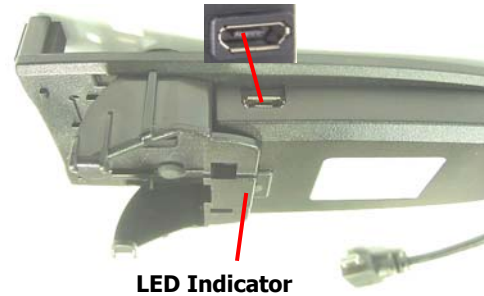


H92P Scan Holder is with Li-Ion battery inside. When in charging, please use the original power adaptor of smartphone (recommend). Through it, it charges both OTG device and H92P internal battery at the same time. When in low battery (Red LED flashing), please charge it immediately.

LED Indicator Information	
Green LED OFF	Full charged (Charge mode)
Green LED ON	Charging (Charge mode)
Red LED Flashing	Low battery (Operation mode)

Attention: Under "Operation mode" please do not charging, otherwise the OTG device's battery will be charging back to H92P's battery.

5

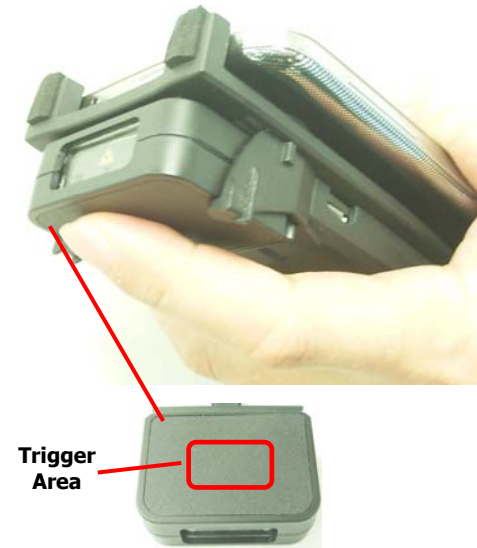

The touch trigger is in the central area of mini scanner. (for both side). Please check the above drawing for your reference.

Installation

Before using scanner, please make sure that the OTG device is fully charged.

- Under USB HID interface
 - ** When plugged into OTG device, it will be recognized and begin to scan the barcode.
- Under USB Serial interface
 - ** Please install PL-2303 driver into your OTG device first. PL-2303 driver can be downloaded from Google Play
 - ** Connect scanner to your OTG device, then, you can know which serial port scanner connects to.
 - ** The data you scan will be sent to serial port and your APP can get the data from serial port directly.

Reset Configuration to Defaults

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 for USB HID or B1 to B2 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



* **Note:** Please install PL-2303 driver for USB Serial.

Keyboard Country (HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / \ < > ~



USA
(Original setting)



Norway



Germany



Sweden



Denmark



Switzerland



Italian



France



Vietnam



Spain



Portugal



Hungary

1D Symbologies -1



Code 128



ISBT 128



Code 39



Code 39
FULL ASCII



Trioptic
Code 39



UPC-A



UPC-E



EAN-8



EAN-13



Composite
CC-C

Composite
CC-A/B

Composite
TLC 39

Code 32

CODE 93

CODE 11



Interleaved 25

Discrete 25




CODABAR



1D Symbologies -3

ENABLE 	<u>Interleaved 25</u>	DISABLE 
ENABLE 	<u>Discrete 25</u>	DISABLE 
ENABLE 	<u>MSI</u>	DISABLE 
ENABLE 	<u>Chinese 25</u>	DISABLE 
ENABLE 	<u>Matrix 25</u>	DISABLE 
ENABLE 	<u>GS1 DataBar</u>	DISABLE 
ENABLE 	<u>GS1 DataBar Limited</u>	DISABLE 
ENABLE 	<u>GS1 DataBar Expanded</u>	DISABLE 

2D Symbologies

ENABLE 	<u>PDF 417</u>	DISABLE 
ENABLE 	<u>Micro PDF 417</u>	DISABLE 
ENABLE 	<u>Data Matrix</u>	DISABLE 
ENABLE 	<u>Maxicode</u>	DISABLE 
ENABLE 	<u>QR CODE</u>	DISABLE 
ENABLE 	<u>Micro QR CODE</u>	DISABLE 
ENABLE 	<u>Aztec</u>	DISABLE 

- Information in this document is subject to change without notice.
- For more information, please visit:
www.riotec.com.tw