



Quick Guide
-DC9257LP

1 H92P

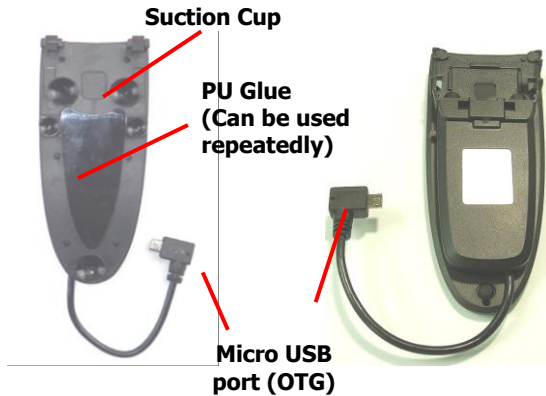


Connect to micro USB port of OTG device

2 H92P

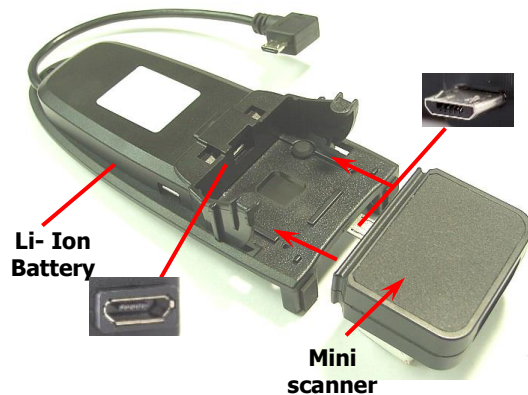


3

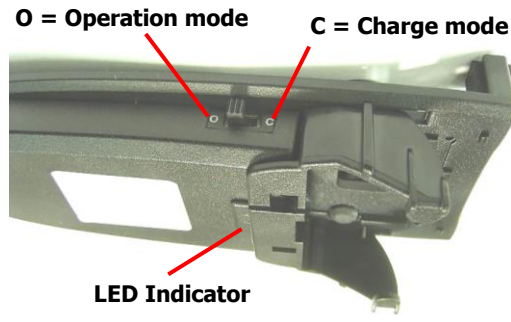

* Before you use it, please switch to "C" for battery charge for 3~4 hours.

* Under "C mode", you can raise/lower soft-keyboard easily.

4

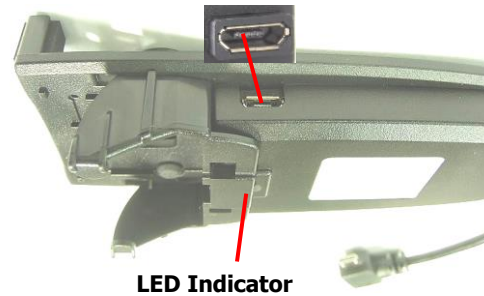

H92P Scan Holder is with Li-Ion battery inside. When in charging, please use the original power adaptor of smartphone (recommend). Through it, it charges both OTG device and H92P internal battery at the same time. When in low battery (Red LED flashing), please charge it immediately.

LED Indicator Information	
Green LED OFF	Full charged (Charge mode)
Green LED ON	Charging (Charge mode)
Red LED Flashing	Low battery (Operation mode)

Attention: Under "Operation mode" please do not charging, otherwise the OTG device's battery will be charging back to H92P's battery.

5



The touch trigger is in the central area of mini scanner. (for both side). Please check the above drawing for your reference.

Installation

Before using scanner, please make sure that the OTG device is fully charged.

- Under USB HID interface
 - ** When plugged into OTG device, it will be recognized and begin to scan the barcode.
- Under USB Serial interface
 - ** Please install PL-2303 driver into your OTG device first. PL-2303 driver can be downloaded from Google Play
 - ** Connect scanner to your OTG device, then, you can know which serial port scanner connects to.
 - ** The data you scan will be sent to serial port and your APP can get the data from serial port directly.

Reset Configuration to Default

(scan from #1 to #3)



1




3



2

Barcode Configuration Method:

(Flow chart for setup procedure :)

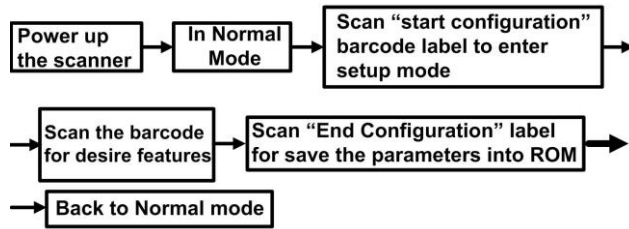

Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~



Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~



1D Symbologies – 1

GS1-Databar (RSS)



UPC-E



UPC-A



Interleaved 2 of 5



Code 128



GS1-128 UCC/EAN-128




MSI





Barcode Configuration Method:




(Flow chart for setup procedure :)

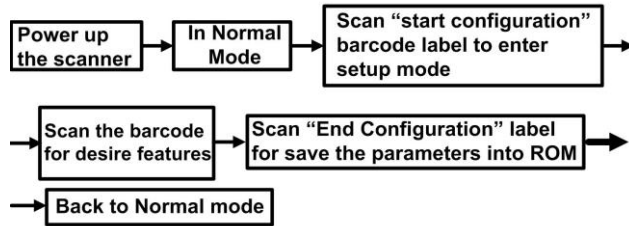



1D Symbolgies – 2

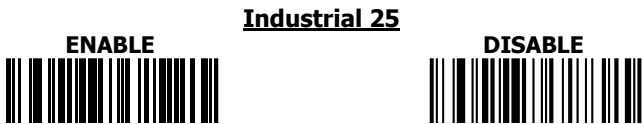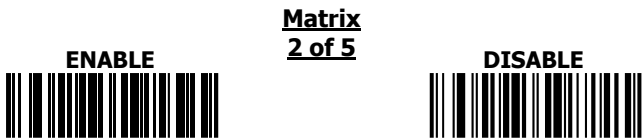

1D Symbolgies – 3

   

2D Symbolgies

  

Inter-Keystroke Delay (For USB HID only)

This parameter specifies the delay between emulated keystrokes.



- Information in this document is subject to change without notice.
- For more information, please visit: www.riotec.com.tw