

# RIOTEC

### **Programming Quick Guide** - FS5107L **Installation**

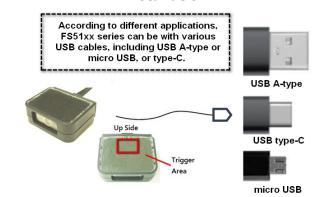

#### **Reset Configuration to Defaults**


If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 to A3 for USB HID or B1 to B5 for RS232 or USB Serial. This will reset the scanner to its factory defaults.

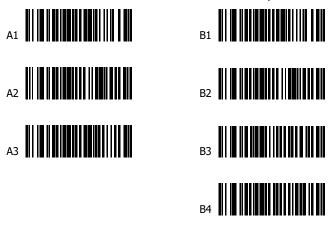

\*Note: Please install PL-2303 driver for USB Serial.

#### **Barcode Configuration Method:**

(Flow chart for setup procedure:)

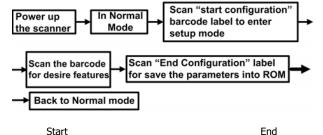





#### **Keyboard Country (For USB HID only)**

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other 





















Turkey Q

#### **Keyboard Country (For USB HID only)**

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other 



Germany **Austria** 

Sweden



**Portugal** 

## 1D Symbologies – 1

