

Programming Quick Guide

-LS6300J

Installation

Make sure that the scanner has the correct cable to plug into PC as below described,
After you plug cable into PC and hear the beep sound, the scanner can read the barcodes now.



Reset Configuration to Default :

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan A1 for USB HID or B1~B2 for RS232 or USB Serial. This will reset the scanner to its factory defaults.

A1	USB HID 	B1	RS232/ USB serial
		B2	

***Note :** Please install PL-2303 driver for USB serial

Keyboard Country (FOR USB HID Only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~

 USA (Original setting)	 France
 Italy	 Spanish
 Portuguese (Brazil)	 Portuguese (Portugal)

1D Symbologies – 1



 ENABLE	<u>CODABAR</u>	 DISABLE
 ENABLE	<u>CODE 39</u>	 DISABLE
 ENABLE	<u>Interleaved 25</u>	 DISABLE
 ENABLE	<u>Industrial 25</u>	 DISABLE

1D Symbologies – 2

 ENABLE	<u>Matrix 25</u>	 DISABLE
 ENABLE	<u>CODE 93</u>	 DISABLE
 ENABLE	<u>CODE 128</u>	 DISABLE
 ENABLE	<u>GS1-128</u>	 DISABLE
 ENABLE	<u>UPC-A</u>	 DISABLE
 ENABLE	<u>UPC-E</u>	 DISABLE
 ENABLE	<u>EAN 8</u>	 DISABLE
 ENABLE	<u>EAN 13</u>	 DISABLE
 ENABLE	<u>ISBN</u>	 DISABLE

1D Symbologies – 3

2D Symbologies

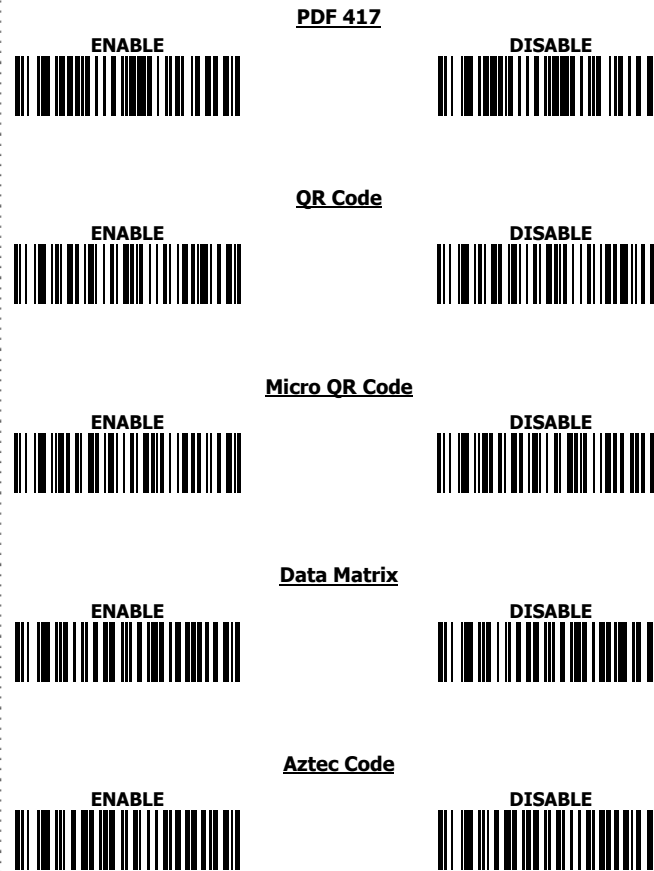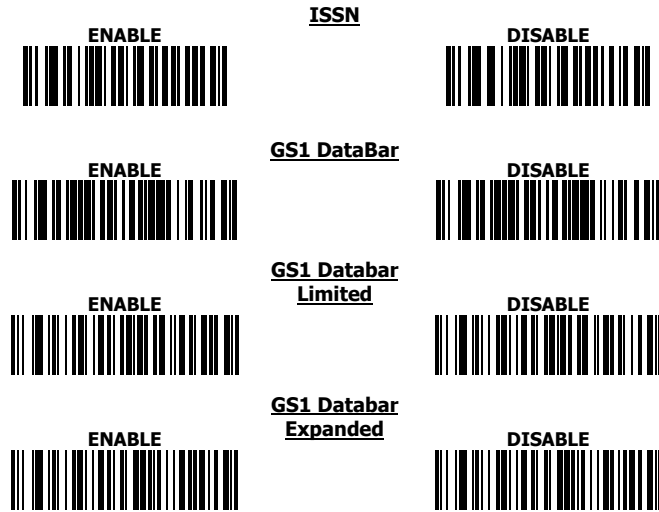

- Information in this document is subject to change without notice.
- For more information, please visit: www.riotec.com.tw