




# Programming Quick Guide LS6303X/LS6323X.

## Getting Started

Power up the computer once the scanner is fully connected.

## Connecting the Scanner

USB Connection : USB(HID)

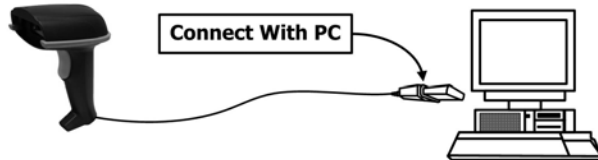

## Auto-sensing setup (For LS6323X Only)

The auto-sensing will active while scanner position on stand. When scanner remove from stand will become trigger mode.



## Barcode Scanner Reading Techniques

The view finder projects an aiming beam that should be centered over the bar code, but it can be positioned in any direction for a good read.



Hold the scanner over the bar code, pull the trigger, and center the aiming beam on the bar code.

The aiming beam is smaller when the scanner is closer to the code and larger when it is farther from the code. Hold the scanner close to smaller bar codes, and farther away from large bar codes to get a proper read.

If the bar code is highly reflective (e.g., laminated), you may need to tilt the scanner at an angle so the bar code can be scanned.

## Standard Product Defaults

The following bar code resets all standard product default settings.



Standard Product Defaults

## Trigger

The following bar codes will allow you to use the scanner in Manual Trigger - Normal Mode (need to press the trigger to read) or Presentation mode (the scanner is activated when it "sees" a bar code).



Manual Trigger-Normal (Default)



Presentation Mode

## Streaming Presentation™

When in Streaming Presentation mode, the scanner leaves the scan illumination on all the time and continuously searches for bar codes.



Streaming Presentation Mode

## Keyboard Country (For USB HID Only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [ ] = / ' \ < > ~



Belgium



Denmark



Finland



France



Germany/  
Austria



Great Britain



Italy



Norway



Spain



Switzerland



USA(Default)

## Suffix

If you want a carriage return after the bar code, scan the **Add CR Suffix bar code**. To add a tab after the bar code, scan the **Add Tab Suffix bar code**. Otherwise, scan the **Remove Suffix bar code** to remove the suffixes



Add CR Suffix



Add Tab Suffix



Remove Suffix

## 1D Symbolologies - 1



ENABLE

Codabar



DISABLE



ENABLE

Code 39



DISABLE



ENABLE

Code 39  
Full ASCII



DISABLE



ENABLE

Code 32



DISABLE



ENABLE

Interleaved  
2 of 5



DISABLE



ENABLE

NEC 2 of 5



DISABLE



ENABLE

Code 93



DISABLE



ENABLE

Straight 2 of 5  
Industrial



DISABLE























ENABLE

Straight 2 of 5  
IATA











DISABLE

## 1D Symbolologies -2



















ENABLE 	<u>Matrix 2 of 5</u>	DISABLE 
ENABLE 	<u>Code 11</u>	DISABLE 
ENABLE 	<u>Code 128</u>	DISABLE 
ENABLE 	<u>GS1-128</u>	DISABLE 
ENABLE 	<u>Telepen</u>	DISABLE 
ENABLE 	<u>UPC-A</u>	DISABLE 
ENABLE 	<u>UPC-E</u>	DISABLE 
ENABLE 	<u>EAN-13</u>	DISABLE 
ENABLE 	<u>EAN-8</u>	DISABLE 
ENABLE 	<u>MSI</u>	DISABLE 

## 1D Symbolologies -3

ENABLE 	<u>GS1 DataBar Omnidirectiona</u>	DISABLE 
ENABLE 	<u>GS1 DataBar Limited</u>	DISABLE 
ENABLE 	<u>GS1 DataBar Expanded</u>	DISABLE 
ENABLE 	<u>Trioptic Code</u>	DISABLE 

\* If you are going to scan Code 32, Trioptic Code must be off.

## 2D Symbolologies -2

ENABLE 	<u>Codablock A</u>	
ENABLE 	<u>Codablock F</u>	DISABLE 
ENABLE 	<u>PDF 417</u>	DISABLE 
ENABLE 	<u>Micro PDF 417</u>	DISABLE 
ENABLE 	<u>QR Code</u>	DISABLE 
ENABLE 	<u>Data Matrix</u>	DISABLE 
ENABLE 	<u>Maxi Code</u>	DISABLE 
ENABLE 	<u>Aztec Code</u>	DISABLE 
ENABLE 	<u>Chinese Sensible (Han Xin) Code</u>	DISABLE 

- Information in this document is subject to change without notice.
- For more information, please visit: [www.riotec.com.tw](http://www.riotec.com.tw)