


Programming Quick Guide

-LS6307L/ LS6327L.

Installation

Make sure that the scanner has the correct cable to plug in the PC as below described: ***Note** : Please install PL-2303 driver for USB serial

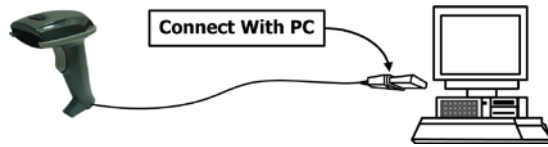

 
 
Auto-sensing setup (For LS6327L Only)

The auto-sensing will active while scanner position on stand. When scanner remove from stand will become trigger mode.




Reset Configuration to Defaults

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 to A3 for USB HID or B1 to B5 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



Barcode Configuration Method:

(Flow chart for setup procedure :)

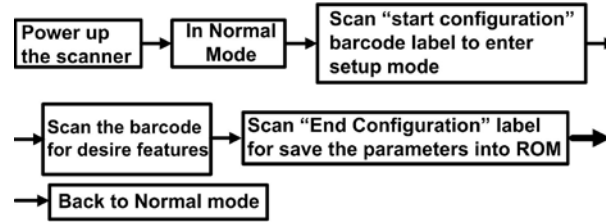

Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~



Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~



1D Symbologies – 1



EAN-8



EAN-13



ISSN



ISBN




Codabar




Barcode Configuration Method:


(Flow chart for setup procedure :)

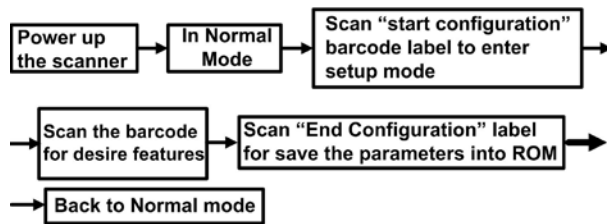


1D Symbolgies – 2

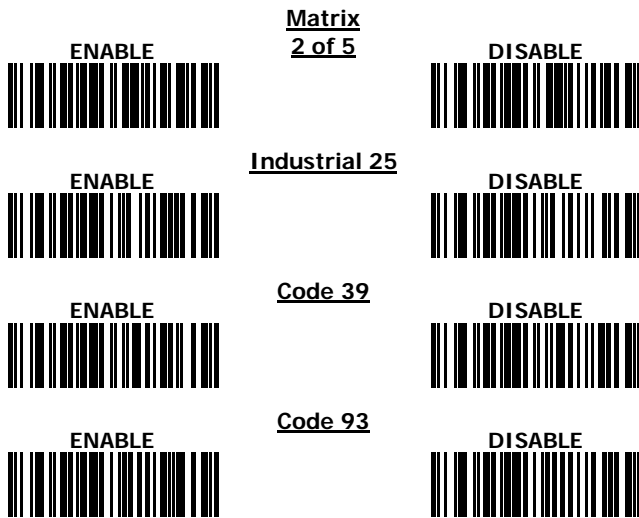

1D Symbolgies – 3

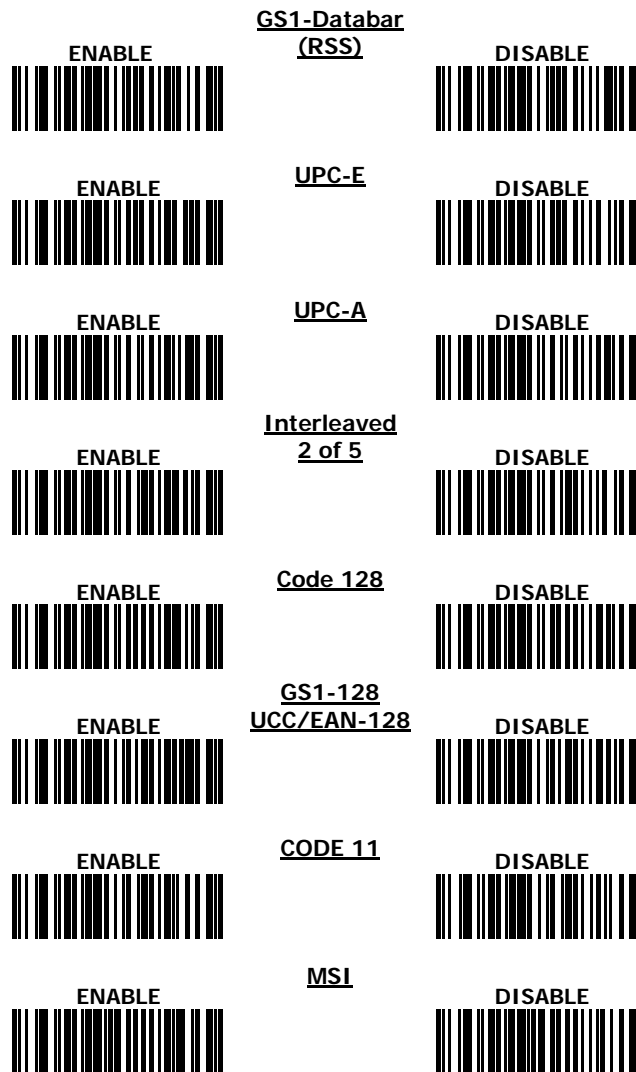

2D Symbolgies

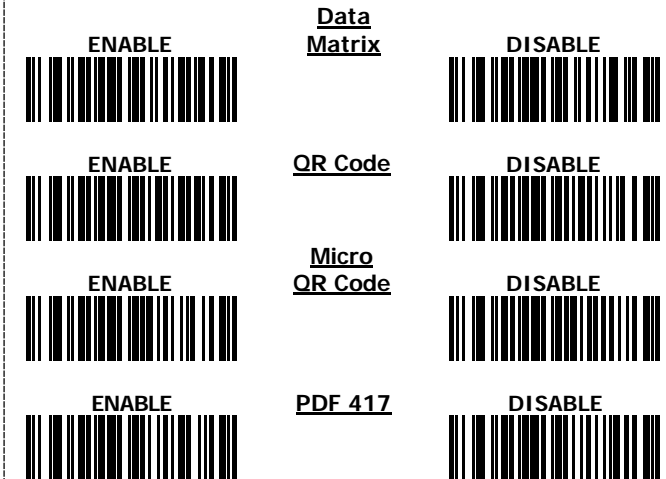

Inter-Keystroke Delay (For USB HID Only)

This parameter specifies the delay between emulated keystrokes.



- Information in this document is subject to change without notice.
- For more information, please visit: www.riotec.com.tw