


Programming Quick Guide

-FS5020J

Installation

Make sure that the scanner has the correct cable to plug in the PC as below described:

***Note :** Please install PL-2303 driver for USB serial

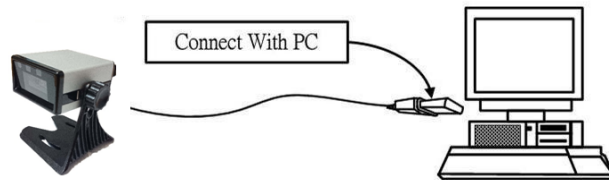

Reset Configuration to Default :

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A for USB HID or B for RS232 or USB Serial(B1~B2)l. This will reset the scanner to its factory defaults.

A1	USB HID 	B1	RS232/ USB serial
		B2	

***Note :** Please install PL-2303 driver for USB serial

Keyboard Country (FOR USB HID Only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~



USA
(Original setting)



Italy



Portuguese (Brazil)



German (Germany)



France



Spanish



Portuguese (Portugal)

1D Symbologies – 1









ENABLE 	<u>CODABAR</u>	DISABLE
ENABLE 	<u>CODE 39</u>	DISABLE
ENABLE 	<u>Interleaved 25</u>	DISABLE
ENABLE 	<u>Industrial 25</u>	DISABLE











1D Symbologies – 2

ENABLE 	<u>Matrix 25</u>	DISABLE
ENABLE 	<u>CODE 93</u>	DISABLE
ENABLE 	<u>CODE 128</u>	DISABLE
ENABLE 	<u>GS1-128</u>	DISABLE
ENABLE 	<u>UPC-A</u>	DISABLE
ENABLE 	<u>UPC-E</u>	DISABLE
ENABLE 	<u>EAN 8</u>	DISABLE
ENABLE 	<u>EAN 13</u>	DISABLE
ENABLE 	<u>ISBN</u>	DISABLE

1D Symbologies – 3

2D Symbologies

ENABLE 	<u>ISSN</u>	DISABLE 
ENABLE 	<u>GS1 DataBar</u>	DISABLE 
ENABLE 	<u>GS1 Databar Limited</u>	DISABLE 
ENABLE 	<u>GS1 Databar Expanded</u>	DISABLE 

ENABLE 	<u>PDF 417</u>	DISABLE 
ENABLE 	<u>QR Code</u>	DISABLE 
ENABLE 	<u>Micro QR Code</u>	DISABLE 
ENABLE 	<u>Data Matrix</u>	DISABLE 
ENABLE 	<u>Aztec Code</u>	DISABLE 

- Information in this document is subject to change without notice.
- For more information, please visit: www.riotec.com.tw