



# Programming Quick Guide

## CR6300C/CR6320C/FS5020C

### Installation

Make sure that the scanner has the correct cable to plug into the PC as below described:

#### 1. USB cable connection

*(Please use correct cable for the interface)*

#### Reset Configuration to Default

If you are unsure of the scanner configuration or have scanned the incorrect codes, please read the "Default" barcode. This will reset the scanner to its factory default.




**HID Default**



#### 2. Auto-sensing setup

The auto-sensing will be activated while scanner puts on stand. When scanner is removed from stand, it becomes trigger mode.

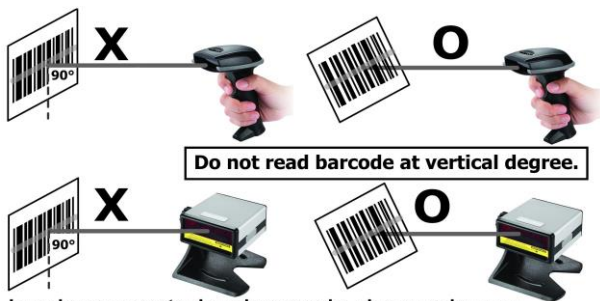

In order scanner to decode properly, please make sure relocation the barcode from scanner window completely when reading same barcode.

OUTPUT MODE -  
KEYBOARD / USB



SINGLE SCAN



LASER TIMEOUT  
- 5 SECONDS



OUTPUT  
MODE

READING  
MODE

OUTPUT MODE  
- RS232 (SERIAL)



SINGLE SCAN  
NO TRIGGER



LASER TIMEOUT  
- 2 SECONDS



### Keyboard Language

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [ ] = / ' \ < > ~

USA



FRANCE



ITALY



NETHERLANDS



FINLAND



GERMANY



PORTUGAL



NORWAY



BELGIUM



SWITZERLAND



SWEDEN



CANADA



GREECE



JAPAN



TURKEY1



SPAIN



RUSSIAN



CZECH



DENMARK



HUNGARY



ENGLAND

















TURKEY2



## Symbologies -1

CODE 11 - ENABLE 	<b><u>CODE 11</u></b>	CODE 11 - DISABLE 
CODE 39 - ENABLE 	<b><u>CODE 39</u></b>	CODE 39 - DISABLE 
FULL ASCII - ENABLE 		FULL ASCII - DISABLE 
CODE 93 - ENABLE 	<b><u>CODE 93</u></b>	CODE 93 - DISABLE 
CODE 128 - ENABLE 	<b><u>CODE 128</u></b>	CODE 128 - DISABLE 
CODE 128 ISBT - ENABLE 		CODE 128 ISBT - DISABLE 
CODABAR - ENABLE 	<b><u>CODABAR</u></b>	CODABAR -DISABLE 

## Symbologies -2

I2OF5 - ENABLE 	<b><u>INTERLEAVED 2 OF 5</u></b>	I2OF5 - DISABLE 
ID2OF5 -ENABLE 	<b><u>INDUSTRIAL 2 OF 5</u></b>	ID2OF5 - DISABLE 
MSI - ENABLE 	<b><u>MSI</u></b>	MSI - DISABLE 
UPC-A - ENABLE 	<b><u>UPC/EAN</u></b>	UPC-A -DISABLE 
UPC-E -ENABLE 		UPC-E -DISABLE 
EAN-13 -ENABLE 		EAN-13 -DISABLE 
EAN-8 - ENABLE 		EAN-8 -DISABLE 

- Information in this document is subject to change without notice.
- For more information, please visit:  
[www.riotec.com.tw](http://www.riotec.com.tw)