
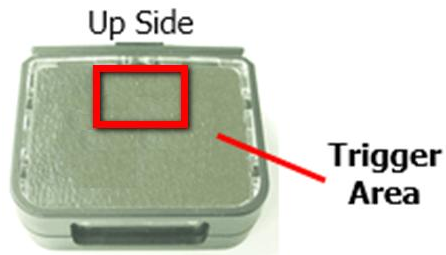


## Programming Quick Guide - FS5100D

### Installation

Make sure that the scanner has the correct cable to plug in the PC as below described:

**\*Note :** Please install PL-2303 driver for USB serial

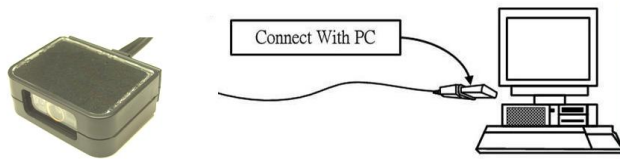

### Reset Configuration to Defaults

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 to A6 for USB HID or B1 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



\* **Note:** Please install PL-2303 driver for USB Serial.

### Keyboard Country(For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States:

@ | \$ # { } [ ] = / ' \ < > ~



**Barcode Configuration Method:**

Please follow the below 4 steps to complete the "Symbologies Enable" or "Symbologies Disable"

1. Start Configuration
2. Choose one of 1D Symbologies
3. Enable setting: scan Enable-1, then Enable-2  
Disable setting: scan Disable-1, then Disable-2
4. End Configuration

**Start Configuration**



**1D Symbologies – 1**

**UPC-A**



**UPC-E**



**EAN-13  
(ISBN/ISSN)**



**EAN-8**



**Industrial  
2 of 5**



**Matrix  
2 of 5**



**Code 93**



**Code 11**



**MSI/Plessey**

 


**UK/Plessey**



**1D Symbologies – 2**

**Codabar**



**Code 128**




**UCC/EAN 128**



**ISBT 128**



 **Code 39  
(Code 32)**



**Interleaved  
2 of 5**



**China Post**



**GS1 DataBar**



**GS1 DataBar Limited**



**GS1 DataBar  
Expanded**



**Enable-1**



**Disable-1**



**Enable-2**



**Disable-2**



**End Configuration**



- Information in this document is subject to change without notice.
- For more information, please visit: [www.riotec.com.tw](http://www.riotec.com.tw)