




Programming Quick Guide - FS5102N

Installation

Make sure that the scanner has the correct cable to plug in the PC as below described:

* **Note** : Please install PL-2303 driver for USB serial

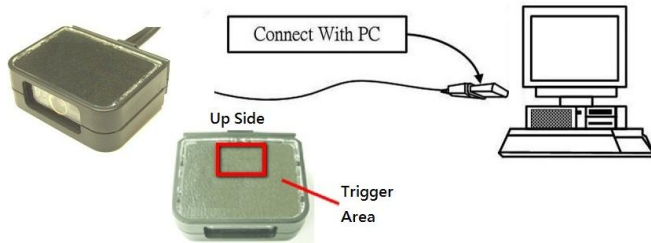

Reset Configuration to Defaults

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 for USB HID or B1 to B2 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



* **Note**: Please install PL-2303 driver for USB Serial.

Keyboard Country (HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~



USA
(Original setting)



Italian



Norway



France



Germany



Vietnam



Sweden



Spain



Denmark



Portugal



Switzerland



Hungary

1D Symbolgies -1



ENABLE

Code 128



DISABLE



ENABLE

ISBT 128



DISABLE



ENABLE

Code 39



DISABLE



ENABLE

**Code 39
FULL ASCII**



DISABLE



ENABLE

**Trioptic
Code 39**



DISABLE



ENABLE

UPC-A



DISABLE



ENABLE

UPC-E



DISABLE



ENABLE

EAN-8



DISABLE



ENABLE

EAN-13



DISABLE



ENABLE

CODABAR



DISABLE

1D Symbolologies -2

ENABLE 	<u>Interleaved 25</u>	DISABLE
ENABLE 	<u>Discrete 25</u>	DISABLE
ENABLE 	<u>MSI</u>	DISABLE
ENABLE 	<u>Chinese 25</u>	DISABLE
ENABLE 	<u>Matrix 25</u>	DISABLE
ENABLE 	<u>GS1 DataBar</u>	DISABLE
ENABLE 	<u>GS1 DataBar Limited</u>	DISABLE
ENABLE 	<u>GS1 DataBar Expanded</u>	DISABLE

1D Symbolologies -3

ENABLE 	<u>Composite CC-C</u>	DISABLE
ENABLE 	<u>Composite CC-A/B</u>	DISABLE
ENABLE 	<u>Composite TLC 39</u>	DISABLE
ENABLE 	<u>Code 32</u>	DISABLE
ENABLE 	<u>CODE 93</u>	DISABLE
ENABLE 	<u>CODE 11</u>	DISABLE
ENABLE 	<u>Interleaved 25</u>	DISABLE
ENABLE 	<u>Discrete 25</u>	DISABLE

2D Symbolologies

ENABLE 	<u>PDF 417</u>	DISABLE
ENABLE 	<u>Micro PDF 417</u>	DISABLE
ENABLE 	<u>Data Matrix</u>	DISABLE
ENABLE 	<u>Maxicode</u>	DISABLE
ENABLE 	<u>QR CODE</u>	DISABLE
ENABLE 	<u>Micro QR CODE</u>	DISABLE
ENABLE 	<u>Aztec</u>	DISABLE
ENABLE 	<u>ISBT 128</u>	DISABLE

- Information in this document is subject to change without notice.
- For more information, please visit: www.riotec.com.tw