


## Programming Quick Guide -LS6307L/ FS5027L

### **Installation**


Make sure that the scanner has the correct cable to plug in the PC as below described:

\*Note: Please install PL-2303 driver for USB serial

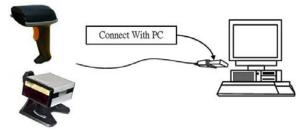

### **Reset Configuration to Defaults**


If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 to A3 for USB HID or B1 to B5 for RS232 or USB Serial. This will reset the scanner to its factory defaults.

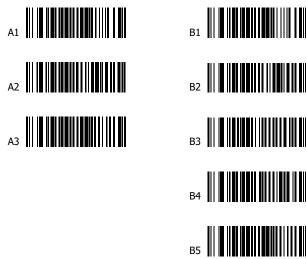

\*Note: Please install PL-2303 driver for USB Serial.

#### **Barcode Configuration Method:**

 (Flow chart for setup procedure:)



# Start Configuration



## **Keyboard Country (For USB HID only)**





Turkey Q

### **Keyboard Country (For USB HID only)**











## 1D Symbologies - 1

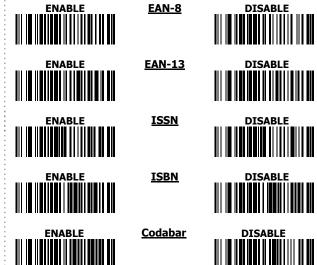

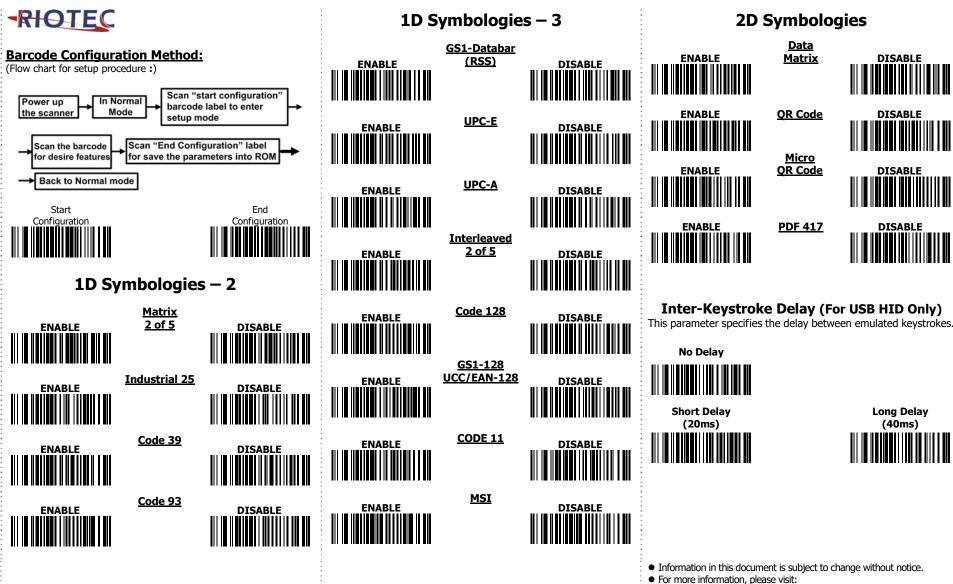

www.riotec.com.tw

R\_151116\_03