




## Programming Quick Guide - OM7520M

### Installation

Make sure that the scanner has the correct cable to plug in the PC as below described:

**\*Note :** Please install PL-2303 driver for USB serial

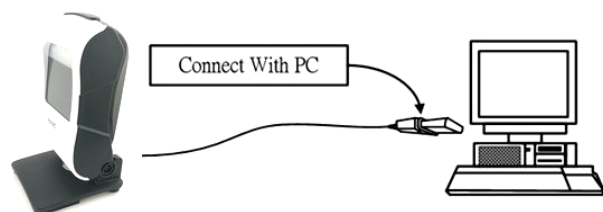

### Reset Configuration to Default :

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan A1 for USB HID or B1~B2 for RS232 / USB Serial. This will reset the scanner to its factory defaults.



**\*Note :** Please install PL-2303 driver for USB serial

### Keyboard Country (FOR USB HID Only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [ ] = / ' \ < > ~



USA  
(Original setting)



Italy



Portuguese (Brazil)



German



France



Spanish



Portuguese (Portugal)

### 1D Symbolologies – 1



CODABAR



CODE 39



Interleaved  
25



Industrial  
25



### 1D Symbolologies – 2



Matrix 25



CODE 128



GS1-128



UPC-A



UPC-E















EAN 8



EAN 13



## 1D Symbolologies – 3

ENABLE 	<u>ISSN</u>	DISABLE 
ENABLE 	<u>GS1DataBar</u>	DISABLE 
ENABLE 	<u>GS1 Databar Limited</u>	DISABLE 
ENABLE 	<u>GS1 Databar Expanded</u>	DISABLE 
ENABLE 	<u>ISBN</u>	DISABLE 
ENABLE 	<u>CODE 93</u>	DISABLE 

## 2D Symbolologies

ENABLE 	<u>PDF 417</u>	DISABLE 
ENABLE 	<u>QR Code</u>	DISABLE 
ENABLE 	<u>Micro QR Code</u>	DISABLE 
ENABLE 	<u>Data Matrix</u>	DISABLE 
ENABLE 	<u>Aztec Code</u>	DISABLE 