


Programming Quick Guide

-iLS6300FBU/iLS6300FB

Connecting the Scanner

Be sure that PC is turned OFF, before Connect scanner cable to the PC USB port on the PC as below described, Ensure that all connections are ready, and turn on your PC.

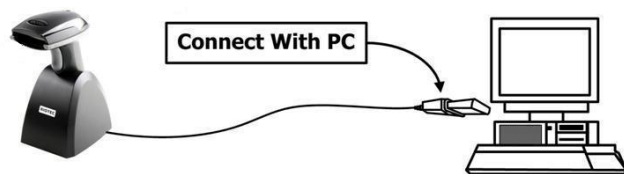

1. Please switch ON and charge scanner for 4~5 hours at first time before use. Scanner switch shown on Fig. 2.
2. After switch ON, the Orange LED will flash following with 3 beep-sounds. The RED LED will be OFF while it links to cradle within Bluetooth radio range.
3. If RED LED is continual ON, please re-plug USB cable, then, scan the 3 barcodes on the bottom of cradle sequentially. (Shown on Fig. 3 From 1 to 3).
4. Charging issue: Cradle works as charger when putting scanner on it. Even if the scanner's battery is full, the cradle will continue to supply power to the scanner. We suggest you to remove scanner from cradle when scanner is charged fully

* **Note:** Please install PL-2303 driver for **iLS6300FB**




LED Indicator Information	
Orange LED ON	Full charged
Orange LED Flashing	Charging / Low battery
Red LED ON	Offline / out of service
Green LED ON	Good read

Remark:

- * When the battery power is too low, the Orange LED will flash and beep once. Scanner should be charged immediately.
- * If scanner shuts down it is recommended to charge it fully before turning it back on.
- * Under power-saving mode, there will not be LED indication when charging.

Reset Configuration to Defaults



(scan from A1 to A3 for HID profile or B1 to B4 SPP profile)

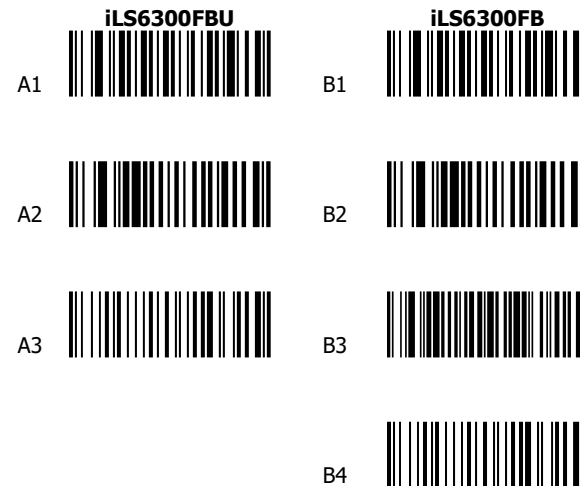

Internal engine (laser light) will be restarted (flashing) whenever the scanner position on the Cradle or pick up from Cradle. In case this Annoyed you, can disable it by the setting code offered below.



Trigger Mode



Transmission Speed

Transmission speed is dependent on your device. In order not to lose data, please choose the correct speed. Middle-speed is the Default.



Bluetooth Auto-connection

Bluetooth Auto-connection **ON**:
When out of range, it will keep trying to connect to device, scanner will not enter power-saving mode.

Bluetooth Auto-connection **OFF**:
When you are out of BT signal range, scanner will stop sending auto-connection signal to device after 2 minutes. During this time, it will not enter power-saving mode. Once you are back within range, press trigger to connect to the device. **(Default)**

Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~



USA
(Original setting)



Norway



Germany



Sweden



Denmark



Switzerland (F)



Latin America



Brazil



Belgium



Italian



France



Vietnam



Spain



Portugal



Hungary



Icelandic



Poland



Turkey F



Bulgarian Latin



Finland



Netherlands



Thai



Switzerland German



Turkey Q



Japan



Korea



Russia

*The different keyboard language option starts from June, 2017.

Power-saving Mode



Power-saving mode OFF



Power-saving mode ON (Default):
Enter power-saving mode after 3-minute inactivity. This function conserves battery power. When you press "SCAN/Power ON" button, it will wake up and begin to scan.



Power-saving mode ON:
Enter power-saving mode after 10-minute inactivity. This function conserves battery power. When you press "SCAN/Power ON" button, it will wake up and begin to scan.

*When charging, the scanner will not enter power-saving mode automatically

How to append a "prefix" or a "suffix" to the barcode data



prefix



suffix

1. Scan above configuration code for Prefix or Suffix
2. Enter the required values (right, numeric barcode) for Prefix or Suffix using the hex values for the desired HEX values from "Prefix & Suffix TABLE (blew page)"
3. Then, end by scanning Code X (below, right)

- * The max. of special characters is 5.
- * When you append 1~4 required values for Prefix or Suffix, it must end with Code X
- * It doesn't need Code X, if you append 5 values to barcode data.

How to delete Prefix or Suffix

1. Scan above configuration code for Prefix or Suffix
2. Enter the "0" "0" (above, right)
3. Then end by scanning Code X (below, right)

Numeric barcode for settings



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



A



B



X

Prefix & Suffix TABLE

HEX	HID (SPP)	HEX	HID (SPP)	HEX		HEX		HEX		HEX	
01	CTRL A (SOH)	19	CTRL Y (EM)	20	SPACE	38	8	50	P	68	h
02	CTRL B (STX)	1A	CTRL Z(SUB)	21	!	39	9	51	Q	69	i
03	CTRL C (ETX)	1B	ESC (ESC)	22	"	3A	:	52	R	6A	j
04	CTRL D (EOT)	1C	CTRL \ (FS)	23	#	3B	;	53	S	6B	k
05	CTRL E (ENQ)	1D	CTRL] (GS)	24	\$	3C	<	54	T	6C	l
06	CTRL F (ACK)	1E	CTRL ^ (RS)	25	%	3D	=	55	U	6D	m
07	CTRL G (BEL)	1F	CTRL _ (US)	26	&	3E	>	56	V	6E	n
08	Backspace (BS)			27	'	3F	?	57	W	6F	o
09	Tab (HT)			28	(40	@	58	X	70	p
0A	CTRL J (LF)			29)	41	A	59	Y	71	q
0B	CTRL K (VT)			2A	*	42	B	5A	Z	72	r
0C	CTRL L (FF)			2B	+	43	C	5B	[73	s
0D	Enter (CR)			2C	,	44	D	5C	\	74	t
0E	CTRL N (SO)			2D	-	45	E	5D]	75	u
0F	CTRL O (SI)			2E	.	46	F	5E	^	76	v
10	CTRL P (DLE)			2F	/	47	G	5F	_	77	w
11	CTRL Q (DC1)			30	0	48	H	60	`	78	x
12	CTRL R (DC2)			31	1	49	I	61	a	79	y
13	CTRL S (DC3)			32	2	4A	J	62	b	7A	z
14	CTRL T (DC4)			33	3	4B	K	63	c	7B	{
15	CTRL U (NAK)			34	4	4C	L	64	d	7C	
16	CTRL V (SYN)			35	5	4D	M	65	e	7D	}
17	CTRL W (ETB)			36	6	4E	N	66	f	7E	~
18	CTRL X (CAN)			37	7	4F	O	67	g		

Symbologies – 1

ENABLE 	CODE 39	DISABLE
ENABLE 	UPC-A	DISABLE
ENABLE 	EAN-13	DISABLE
ENABLE 	EAN-8	DISABLE
ENABLE 	CODE 93	DISABLE

Symbologies – 2

ENABLE 	CODABAR	DISABLE
ENABLE 	INTERLEAVED 25	DISABLE
ENABLE 	INDUSTRIAL 25	DISABLE
ENABLE 	MSI	DISABLE
ENABLE 	PLESSEY	DISABLE
ENABLE 	CODE 11	DISABLE

Symbologies – 3

ENABLE 	<u>MATRIX</u> <u>25</u>	DISABLE 
ENABLE 	<u>POSTCO</u> <u>DE 25</u>	DISABLE 
ENABLE 	<u>AVIATI</u> <u>ON 25</u>	DISABLE 
ENABLE 	<u>GS1</u> <u>Omnidir</u> <u>ectional</u>	DISABLE 
ENABLE 	<u>GS1</u> <u>Limited</u>	DISABLE 

Quick guide is subject to change without notice.

R_180903_01