


2

## Quick Guide - iDC9277L



Connect to micro USB port of Smartphone



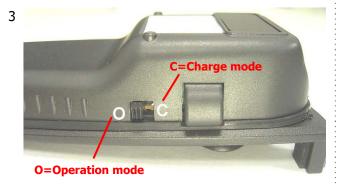

- \* Before you use scanner, please switch to "C- Charge mode" and charge inside battery for 3~4 hours first.
- \* Under "C- Charge mode", you can raise/lower soft-keyboard easily. (For HID profile only)



iDC9277L is with Li-Ion battery inside. When in charging, please use the original USB power adaptor of Smartphone (recommended). Through it, it charges both smartphone & iDC9277L batteries at the same time.

When in low battery (Orange LED flashing, beep once /per 4 seconds), please charge it immediately.

In case the power consumed out totally; the RTC (Real Time Clock) will back to original setting 01012000.

Attention: Please don't charge iDC9277L when in Operation mode. Otherwise, the smartphone's battery will charge back to iDC9277L's battery.

**Left Button** Under BT HID Profile, press Left button to raise/lower soft-Keyboard; press the left button for 4 seconds to un-pair. Then, scanner can be connected with other BT devices (Please check page #2, left column) Indicator (LED) **Touch Trigger Area** SCAN/ Power ON Press 1 second to wake it **Right Button** up from power saving Power Saving button: mode Press the button for 4 second then enter power saving mode

- \*\* When pressing Left button + Right button for 8~9 seconds, iDC9277L will enter deep sleeping mode.
- \*\* Please press Left button + Right button + Touch trigger for 8~9 seconds to activate iDC9277L.
- \*\* The touch sensor area is around the central area.

  Please check the above drawing for your reference.

| <b>LED Indicator Information</b> |                           |  |  |  |  |
|----------------------------------|---------------------------|--|--|--|--|
| Orange LED ON                    | Full charged              |  |  |  |  |
| Orange and Red LED Flashing      | Charging                  |  |  |  |  |
| Orange LED Flashing              | Low battery               |  |  |  |  |
| Red LED ON                       | Off line / out of service |  |  |  |  |
| Green LED ON                     | Good read                 |  |  |  |  |
| Orange LED ON                    | Good read (Batch mode)    |  |  |  |  |

1



## **How to Connect to Smartphone**

- 1. Make sure your device has BT HID or SPP profile
- 2. Turn off Power-Saving mode on your smartphone first
- Then, choose HID or SPP profile and scans the following 2 setting codes before connecting to smartphone. (a1 → a2 or b1 → b2)

If you don't know what profile your device is, please try HID profile first, then, SPP profile.









- 4. Please complete the connection procedures as the right photos.
- 5. After the connection is completed, the RED light will be **OFF**.
- Before using WordPad file or appropriate APP, please set keyboard language of device to **User's language**. Then, scan the barcodes and the barcode data will show on the cursor side.

## Soft-Keyboard setting code for Android / iOS




For Android



For iOS


- \* Under Android system, if you want to raise/lower soft-keyboard, please read the above setting code first. Then, press left button (refer to drawing #5 on page #1) to raise keyboard (LED is RED /Bluetooth is offline), press it again to lower keyboard (LED is off/ Bluetooth is online)
  - \* It will take 5~10 seconds to make BT online/offline.
  - Please be noted that when BT is offline, scanning function is stopped.
  - \* Or, switch "C" to "O" to make BT online. (Drawing 3, page #1)
- \* Under iOS system, press Left button to raise/lower soft-Keyboard;
- \* Press the left button for 4 seconds to un-pair. Then, scanner can be connected with other BT devices

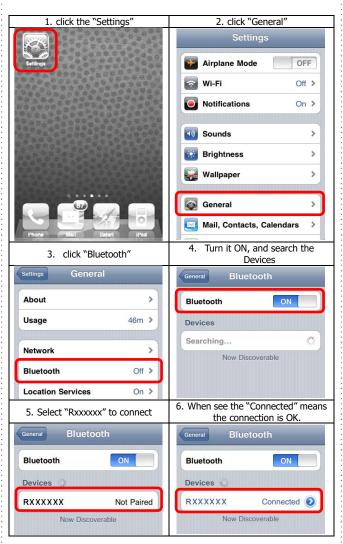

(example: pairing with iPhone)

## **Reset Configuration to Defaults**

(scan from A1 to A4 for HID profile or B1 to B5 for SPP profile)

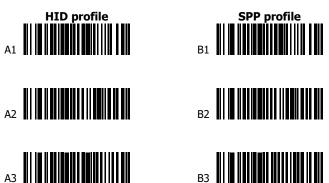







### There are two operating modes on the scanner

|   | •  | -   |  |  |  |  |  |  |  |  |
|---|--|---|--|--|--|--|--|--|--|--|
|   | 1.Data Transmission mode (Default)                 |   |  |  |  |  |  |  |  |  |
|   |  |   |  |  |  |  |  |  |  |  |
|   | It is a necessary to scan "clean memory data" when |   |  |  |  |  |  |  |  |  |
|   | switching between these two modes.                 |   |  |  |  |  |  |  |  |  |
| Within Bluetooth radio Beyond Bluetooth radio ran |  |   |  |  |  |  |  |  |  |  |
|   | range  |   |  |  |  |  |  |  |  |  |
| Data<br>read                                      | Transmit data to PC/terminal directly              | Save data into scanner's memory, scanner will transmit data to PC/ terminal automatically when back to Bluetooth radio range. |  |  |  |  |  |  |  |  |
|   | Enter Data Storage mode                            |   |  |  |  |  |  |  |  |  |
| LED   | Green/ Orange LED flashes followed by 3 beeps.     |   |  |  |  |  |  |  |  |  |

|              | 2.Data Storage mode (Batch Mode)   |  |  |  |  |  |  |  |  |
|--------------|--|--|--|--|--|--|--|--|--|
|              |  |  |  |  |  |  |  |  |  |
|              | It is a necessary to scan "clean memory data" when switching   |  |  |  |  |  |  |  |  |
|              | between these two modes.   |  |  |  |  |  |  |  |  |
| Data<br>read | Save data directly to scanner's memory, It will transmit the data to PC/<br>terminal after you scan the <b>Transmit memory data</b> code. To delete<br>data please scan the <b>Clean memory data</b> code. |  |  |  |  |  |  |  |  |
|              | Enter Data Transmission mode   |  |  |  |  |  |  |  |  |
| LED          | Green/Orange LED flashes followed by 3 beeps.  |  |  |  |  |  |  |  |  |
|              | Always <b>Clean memory data</b> before switching to Data Transmission Mode. Otherwise Red/ Orange LED will flash with one long beep and will not switch modes.   |  |  |  |  |  |  |  |  |

## **Under Data storage Mode**

The data can be keep or delete by option after transmit



Keep the data (Default)



Transmit memory data

Green/Orange LED Flashes followed by 3 beeps



Clean memory data

Green/Orange LED flashes followed by 3 beeps The barcode data which is stored in the memory will be deleted.

## **Trigger Mode**



Trigger always (Trigger available at any time)



Trigger standard (Default) (Trigger available, after data sent to the device)

## **Transmission Speed**

Transmission speed is dependent on your device. In order not to lose data, please choose the correct speed. Middle-speed is the Default.



transmission



Slow-speed transmission (Default)



1 transmission





3 transmission

## **Power-saving Mode**



Power-saving mode OFF



Power-saving mode ON (Default): Enter power-saving mode after 5-minute inactivity. This function converses battery power. When you press "SCAN/Power ON" button, it will wake up and begin to scan.



Power-saving mode ON:

Enter power-saving mode after 10-minute inactivity. This function converses battery power. When you press "SCAN/Power ON" button, it will wake up and begin to scan.

When charging, the scanner will not enter power-saving mode automatically.

# RTC (Real-time clock),

## please set the punctuation mark at the same time

You must scan the below configuration barcode to set the date & time stamp on the scanner.



Date information: ENABLE



**ENABLE** 



DISABLE (default)

DISABLE (default)

## The format of Date setting



Date format 1: mm/dd/20yy (default)

For example: 01/23/2011



Date format 2: dd/mm/20yy For example: 23/01/2011



Date format 3: 20yy/mm/dd For example: 2011/01/23

## The punctuation marks for the intervals among barcode data, date, time



, comma (default) - FOR Android/iOS use For example: ABCD,01/23/2011,12:34:56



Tab - FOR iOS use For example: ABCD 01/23/2011 12:34:56



semicolon - FOR Android/iOS use For example: ABCD;01/23/2011;12:34:56



## **Date and Time setting**



Scan the SET DATE barcode, then, scan the six numeric digits in the format mm/dd/yy, from the numeric barcode.

For example: "01/23/2011", please input 012311



Scan the **SET TIME** barcode, then, scan the six numeric digits in the format hh:mm:ss from the numeric barcode. Time format: 24hr clock For example: "PM 3:25:30", please input "152530"

## **Keyboard Country (For HID profile only)**



Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the 

### Follow the steps mentioned below to program.

- 1. Keyboard Country setting code.
- 2. "Select Country Code"

Read numeric barcode (according to country code).

| Country/<br>Language | No. | Country/<br>Language |            | Country/<br>Language  | No. |
|----------------------|-----|----------------------|------------|-----------------------|-----|
| U.S.                 | 10  | Netherlands          | 26         | Switzerland<br>French | 45  |
| Latin<br>America     | 11  | Hungary 27           |            | Switzerland<br>German | 46  |
| Brazil               | 12  | Italian              | Italian 28 |                       | 47  |
| Belgium              | 20  | Icelandic 29         |            | Turkey F              | 48  |
| Bulgarian<br>Latin   | 21  | Norway               | 30         | Turkey Q              | 49  |
| Denmark              | 22  | Poland               | Poland 41  |                       | 71  |
| Finland              | 23  | Portugal             | 42 Korea   |                       | 72  |
| France               | 24  | Russia               | 43 Thai    |                       | 73  |
| Germany              | 25  | Spain                | 44         | Vietnam               | 74  |

### How to append a "prefix" or a "suffix" to the barcode data





- 1. scan above configuration code for Prefix or Suffix
- 2. enter the required values (right, numeric barcode) for Prefix or Suffix using the hex values for the desired HEX values from Prefix & Suffix TABLE (below page)"
- 3. then, end by scanning Code X (below, right)
- \* The max. of special characters is 5.
- \* When you append 1~4 required values for Prefix or Suffix, it must end with Code X.
- \* It doesn't need Code X, if you append 5 values to barcode data.

#### **How to delete Prefix or Suffix**

- 1. scan above configuration code for Prefix or Suffix
- 2. enter the "0" "0" (above, left)
- 3. then end by scanning Code X (below, right)

## **Numeric barcode for settings**
























#### **Prefix & Suffix TABLE**

| HEX | HID<br>(SPP)      | HEX | HID<br>(SPP)   | HEX |       | HEX |   | HEX |   | HEX |   |
|-----|-------------------|-----|----------------|-----|-------|-----|---|-----|---|-----|---|
| 01  | CTRL A<br>(SOH)   | 19  | CTRL Y<br>(EM) | 20  | SPACE | 38  | 8 | 50  | Р | 68  | h |
| 02  | CTRL B<br>(STX)   | 1A  | CTRL<br>Z(SUB) | 21  | !     | 39  | 9 | 51  | Q | 69  | i |
| 03  | CTRL C<br>(ETX)   | 1B  | ESC<br>(ESC)   | 22  | "     | 3A  | : | 52  | R | 6A  | j |
| 04  | CTRL D<br>(EOT)   | 1C  | CTRL \ (FS)    | 23  | #     | 3B  | ; | 53  | S | 6B  | k |
| 05  | CTRL E<br>(ENQ)   | 1D  | CTRL ]<br>(GS) | 24  | \$    | 3C  | < | 54  | Т | 6C  | I |
| 06  | CTRL F<br>(ACK)   | 1E  | CTRL ^<br>(RS) | 25  | %     | 3D  | = | 55  | U | 6D  | m |
| 07  | CTRL G<br>(BEL)   | 1F  | CTRL_<br>(US)  | 26  | &     | 3E  | > | 56  | ٧ | 6E  | n |
| 08  | Backspace<br>(BS) |     |                | 27  | •     | 3F  | ? | 57  | W | 6F  | 0 |
| 09  | Tab<br>(HT)       | HEX | HID<br>Only    | 28  | (     | 40  | @ | 58  | Χ | 70  | р |
| 0A  | CTRL J<br>(LF)    | 80  | F1             | 29  | )     | 41  | Α | 59  | Υ | 71  | q |
| 0B  | CTRL K<br>(VT)    | 81  | F2             | 2A  | *     | 42  | В | 5A  | Z | 72  | r |
| 0C  | CTRL L<br>(FF)    | 82  | F3             | 2B  | +     | 43  | С | 5B  | [ | 73  | s |
| 0D  | Enter<br>(CR)     | 83  | F4             | 2C  | ,     | 44  | D | 5C  | ١ | 74  | t |
| 0E  | CTRL N<br>(SO)    | 84  | F5             | 2D  | -     | 45  | Е | 5D  | ] | 75  | u |
| 0F  | CTRL O<br>(SI)    | 85  | F6             | 2E  |       | 46  | F | 5E  | ^ | 76  | ٧ |
| 10  | CTRL P<br>(DLE)   | 86  | F7             | 2F  | 1     | 47  | G | 5F  | - | 77  | w |
| 11  | CTRL Q<br>(DC1)   | 87  | F8             | 30  | 0     | 48  | Н | 60  | ` | 78  | Х |
| 12  | CTRL R<br>(DC2)   | 88  | F9             | 31  | 1     | 49  | I | 61  | а | 79  | у |
| 13  | CTRL S<br>(DC3)   | 89  | F10            | 32  | 2     | 4A  | J | 62  | b | 7A  | Z |
| 14  | CTRL T<br>(DC4)   | 8A  | F11            | 33  | 3     | 4B  | K | 63  | С | 7B  | { |
| 15  | CTRL U<br>(NAK)   | 8B  | F12            | 34  | 4     | 4C  | L | 64  | d | 7C  | 1 |
| 16  | CTRL V<br>(SYN)   |     |                | 35  | 5     | 4D  | М | 65  | е | 7D  | } |
| 17  | CTRL W<br>(ETB)   |     |                | 36  | 6     | 4E  | N | 66  | f | 7E  | 2 |
| 18  | CTRL X<br>(CAN)   |     |                | 37  | 7     | 4F  | 0 | 67  | g |     |   |

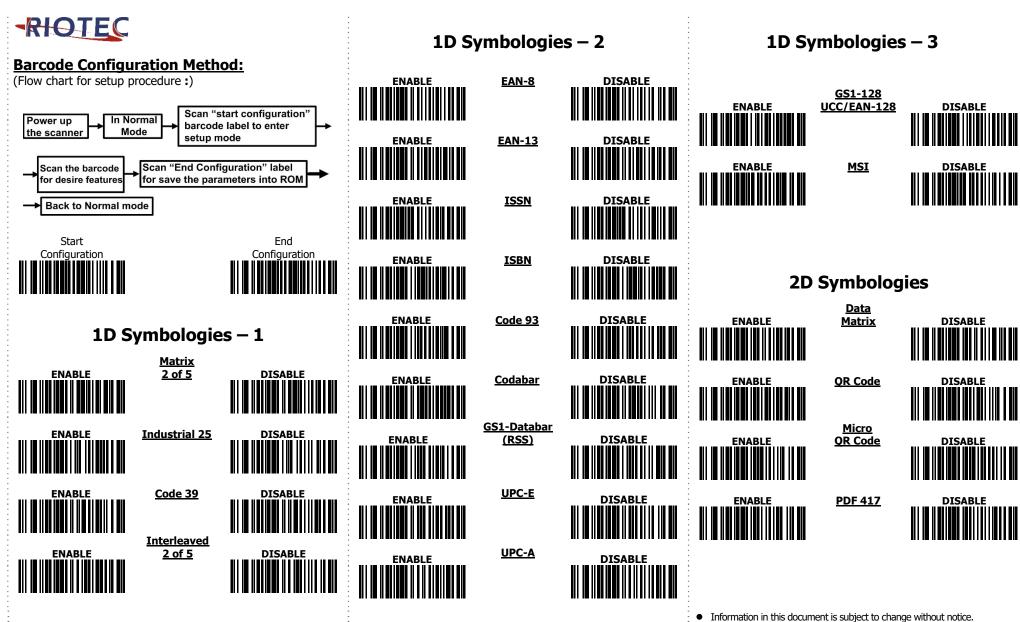

- For more information, please visit:
- www.riotec.com.tw