



Bluetooth CCD Pocket barcode scanner

Quick Guide



Model no.: IDC9607AW

Introduction

Designed primarily for POS retail/inventory environments, the IDC9607AW is a Bluetooth pocket barcode scanner that allows you to scan various barcoded items. Its in-built excellent CCD engine allows you to reliably read 1D barcodes on various shapes and is a great space-saver for busy or limited workspaces. It supports iOS, Android, and Windows devices through BT HID or BT SPP communication.

Delivery content

- * Pocket Barcode scanner x 1
- * Mini USB cable x 1 (charged by USB power adapter of smartphone only)
- * Quick instructions x 1
- * Glove set (Glove + Holder + Ring Trigger Cable) x 1set

Limited Warranty

Riotech provide one-year limited warranty. Riotech will not warranty any product which has been subjected to improper usage, neglect or unauthorized repair or installation. Besides, warranty does not cover the faulty usages or consumable parts. (Cable & battery are consumable.)

Safety instructions

Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property.


- * Don't put scanner in places excessively high temperatures, such as expose under direct sunlight
- * Don't use scanner in extremely humid area or drastic temperature change
- * The rechargeable battery is permanently built into the product and cannot be replaced.
- * Never damage the rechargeable battery. Damaging the casing of the rechargeable battery might cause an explosion or a fire!

Operating elements

** Please switch ON and charge scanner for 3~4 hours at first time before use.



- ** In the beginning, you must press the orange trigger button for 8 seconds to turn on the pocket barcode scanner. Then, press it for scanning barcodes & waking up from sleeping mode.
- ** If you won't use pocket scanner for quite a long time, you can press 2 grey buttons to enter "Deep Sleep Mode" (like turn-off).

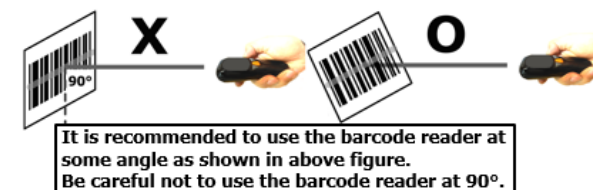



How to use Glove, Holder, Ring Trigger cable



How to Connect to Smartphone or Tablet

1. Make sure your device supports BT HID or BT SPP profile
2. Turn off Power-Saving mode on your smartphone/tablet first
3. Then, choose HID or SPP device before connecting to smartphone/tablet. If you don't know what profile your device is, please try HID profile first, then, SPP profile.

1. Main MENU

```
MAIN> S 12:52
Direct-scan
Memory-scan
Upload
↑ ENTER ↓
```

3. select BT setup

```
S> S 12:52
BT setup
Sleep time
Output Speed
ESC ENTER ↓
```

2. select Setup

```
MAIN> S 12:52
Memory-scan
Upload
Setup
↑ ENTER ↓
```

After you select what you want, press the orange button to enter the next or ESC button back to the previous.

How to connect to SPP or HID device

SPP device (from A1 to A2); HID device (from B1 to B3)

A1. select SPP device

```
S/B> S 12:52
HID device
SPP device
dongle
ESC ENTER ↓
```

A2. select Simple pairing or Pairing

```
S/B/S> S 12:52
Simple pairing
Pairing
ESC ENTER ↓
```

A3. Setting ... Completed.

Setting ... Completed!!!

B1. select HID device

```
S/B> S 12:52
HID device
SPP device
dongle
ESC ENTER ↓
```

B2. select Simple pairing or Pairing

```
S/B/H> S 12:52
Simple pairing
Pairing
ESC ENTER ↓
```

B3. Setting ... Completed.

Setting ... Completed!!!

After you select what you want, press the orange button to enter the next or ESC button back to the previous.



(example: pairing with iPhone)

4. Please complete the connection procedures as the above photos.
5. After the connection is completed, the RED light will be **OFF**.
6. Before using WordPad or appropriate APP, Then, scan the barcodes and the barcode data will show on the cursor side.

Notes:

- * This product complies with Bluetooth standards. This device that communicated with this product must support the same SPP or HID. For other Bluetooth devices with other profiles we cannot guarantee a connection before the product has been tested.
- * The communication speed and range of the product may vary due to obstacles and radio wave condition between the product and device to which it is connected. Condition on the host device may also affect the communication speed and range of the scanner.

LED Indicator Information

Orange LED ON	Full charged
Orange LED Flashing	Charging / Low battery
Red LED ON	Offline / out of service
Green LED ON	Good read
Orange LED ON	Good read (Batch mode)

Remark:

- * When the battery power is too low, the Orange LED will flash and beep once. Scanner should be charged immediately.
- * In case the power consumed out totally; the RTC (Real Time Clock) will back to original setting 01012000.
- * If scanner shuts down, it is recommended to charge it fully before turning it on. (charged by USB power adapter of smartphone only)
- * Under power-saving mode, there will not be LED indication when charging.

Soft-Keyboard setting code for Android / iOS



For Android



For iOS

- * Under Android system:
If you want to raise/lower soft-keyboard, please read the above setting code first. Then, press left button for 2 seconds to raise keyboard (refer to drawing #5 on page #1, LED is RED /Bluetooth is offline), press it again to lower keyboard (LED is off/ Bluetooth is online).
***It will take 5~10 seconds to make BT online/offline.**
***Please be noted that when BT is offline, scanning function is stopped.**
- * Under iOS system:
If you want to raise/lower soft-keyboard, please read the above setting code first. Then, press Left button for 2 seconds to raise/lower soft-keyboard;
Press the left button for 4 seconds to un-pair. Then, scanner can be connected with other BT device.

Reset Configuration to Defaults

(scan from A1 to A8 for HID profile or B1 to B8 for SPP profile)

HID profile

A1



A2



A3



A4



A5



A6



A7



A8



SPP profile

B1



B2



B3



B4



B5



B6



B7




B8




There are two operating modes on the scanner

1. Direct-scan Mode


1. select Direct-scan

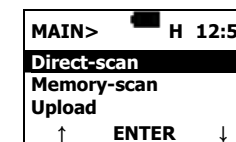

2b. BT is disconnected.




2a. BT connected, begin to scan the barcodes




If BT is disconnected, please back to page #2 and do the pairing procedure again.

2. Memory-scan Mode

1. select Memory-scan

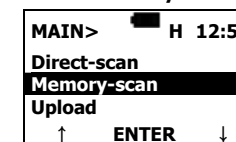

2. begin to scan the barcodes

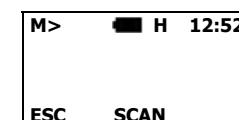


Under Memory-scan mode, enable/disable "Quantity entry" function

Disable "Quantity entry" (default)


1. disable "Quantity entry"
Setting code




2. begin the scan the barcodes



3. press DEL to delete the last barcode data




4. be sure that you want to delete the last barcode.



Enable "Quantity Entry" function,

decide the order of the output data to your device first


1. Q'ty first, then, barcode




3. Enable "Quantity Entry" Setting code



2. Barcode first, then, Q'ty



4. begin the scan the barcodes




When "Quantity Entry" is enabled, decide how to type-in the number.


By button (default) C1. enable




C2. scan the barcode




C3. Press the ENTER to type the q'ty



C4. press ↓ to choose number, then, press ENTER to confirm

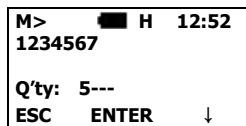


5. Then, scan the next barcode




By scanning the number code D1. enable




D2. scan the barcodes




D3. Press the ENTER to type the q'ty



D4. scan numeric code (page #5)

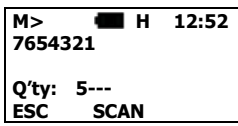


5. end by X code, then, be ready to scan the next




Upload data (Memory-scan)

1. press ESC, select Upload

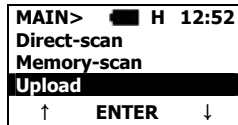


3. After data upload, press ERASE to delete memory data




5. After you delete the memory data, it will be back to MAIN MENU

2. BT connected, press START to send data




4. be sure that you want to delete memory data.




Switch from Memory-scan to Direct-scan mode


1. switch Memory-scan to Direct-scan mode



3. begin to scan the barcode




2. must delete all data in the memory




Power-saving Mode


1. Main MENU

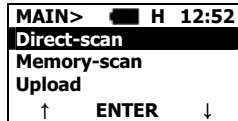


3. select Sleep time

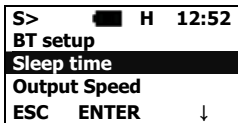

2. select Setup

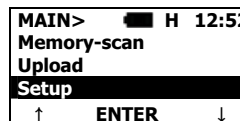

4. press ↓, decide the time to enter sleeping mode

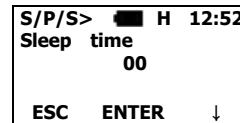


When charging, the scanner will not enter power-saving mode automatically


Transmission Speed

Transmission speed is dependent on your device. In order not to lose data, please choose the correct speed.


1. Main MENU

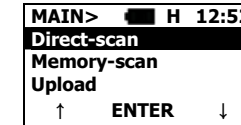


3. select Output Speed

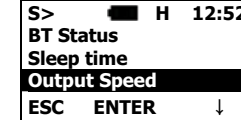

2. select Setup

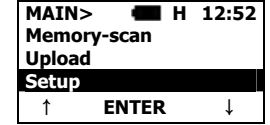


4. select the speed type,

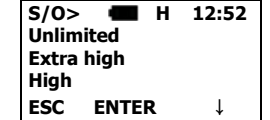


RTC (Real-time clock)


1. Main MENU

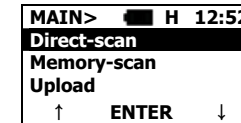


3. select Time setup




5. select Date Stamp

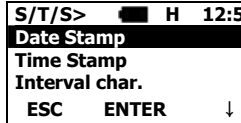


7. press ESC, select Time Stamp

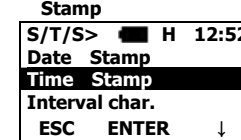


9. press ESC, select Interval char.

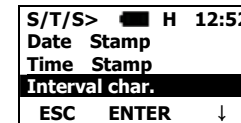


2. select Setup

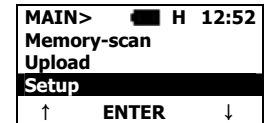


4. select Stamp




6. Date Stamp is on or off.

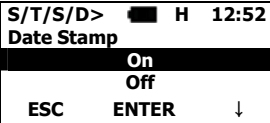

8. Time Stamp is on or off

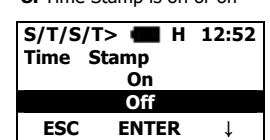

8. select Interval char.

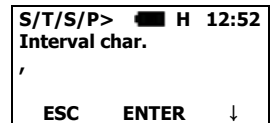

The format of Date setting

1. Main MENU

```

MAIN> H 12:52
Direct-scan
Memory-scan
Upload
↑ ENTER ↓
    
```

3. select Time setup

```

S> H 12:52
Sleep time
Output Speed
Time setup
ESC ENTER ↓
    
```

5. select the format of date

```

S/T/F> H 12:52
MM/DD/YY
DD/MM/YY
YY/MM/DD
ESC ENTER ↓
    
```

2. select Setup

```

MAIN> H 12:52
Memory-scan
Upload
Setup
↑ ENTER ↓
    
```

4. select Format

```

S/T> H 12:52
Stamp
Format
Date adj.
ESC ENTER ↓
    
```

Date setting

1. Main MENU

```

MAIN> H 12:52
Direct-scan
Memory-scan
Upload
↑ ENTER ↓
    
```

3. select Time setup

```

S> H 12:52
Sleep time
Output Speed
Time setup
ESC ENTER ↓
    
```

5. Set the date, press ↓ to select number, then, press **ENTER** to go to the next

```

S/T/D> H 12:52
Year (00-99) : 11
Month (01-12) : 12
Date (01-XX) : 02
ESC ENTER ↓
    
```

2. select Setup

```

MAIN> H 12:52
Memory-scan
Upload
Setup
↑ ENTER ↓
    
```

4. select Date adj.

```

S/T> H 12:52
Stamp
Format
Date adj.
ESC ENTER ↓
    
```

6. Save the date data

```

Save it ?
NO YES
    
```

Time setting

1. Main MENU

```

MAIN> H 12:52
Direct-scan
Memory-scan
Upload
↑ ENTER ↓
    
```

3. select Time setup

```

S> H 12:52
Sleep time
Output Speed
Time setup
ESC ENTER ↓
    
```

5. set the time. Press ↓ to select the number, then, press the **ENTER** to go the next

```

S/T/T> H 12:52
Hour (00-23) : 00
Min (00-59) : 00
Sec (00-59) : 00
ESC ENTER ↓
    
```

2. select Setup

```

MAIN> H 12:52
Memory-scan
Upload
Setup
↑ ENTER ↓
    
```

4. select Clock adj.

```

S/T> H 12:52
Format
Date adj.
Clock adj.
ESC ENTER ↓
    
```

6. save the time setting

```

Save it ?
NO YES
    
```

Trigger Mode



Trigger always
(Trigger available at any time)



Trigger standard (Default)
(Trigger available, after data sent to the device)

Multi-language UI setting

(can be changed to different UI by reading the below setting code)



Germany UI



Japan UI



English UI (Default)



Spain UI



French UI

Keyboard Country



Scan the appropriate country code below to program the keyboard for your country or language. As a general rule, the following characters are not supported by the scanner for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~

Follow the steps mentioned below to program.

1. Keyboard Country setting code.
2. "Select Country Code"

Read numeric barcode (according to country code).

Country/ Language	No.	Country/ Language	No.	Country/ Language	No.
U.S.	10	Netherlands	26	Switzerland French	45
Latin America	11	Hungary	27	Switzerland German	46
Brazil	12	Italian	28	Sweden	47
Belgium	20	Icelandic	29	Turkey F	48
Bulgarian Latin	21	Norway	30	Turkey Q	49
Denmark	22	Poland	41	Japan	71
Finland	23	Portugal	42	Korea	72
France	24	Russia	43	Thai	73
Germany	25	Spain	44	Vietnam	74

How to append a "prefix" or a "suffix" to the barcode data



prefix



suffix

1. Scan above configuration code for Prefix or Suffix
2. Enter the required values (right, numeric barcode) for Prefix or Suffix using the hex values for the desired HEX values from Prefix & Suffix TABLE
3. Then, end by scanning Code X (below, right)

- * The max. of special characters is 5.
- * When you append 1~4 required values for Prefix or Suffix, it must end with Code X.
- * It doesn't need Code X, if you append 5 values to barcode data.

How to delete Prefix or Suffix

1. Scan above configuration code for Prefix or Suffix
2. Enter the "0" "0" (above, right)
3. Then end by scanning Code X (below, right)

Numeric barcode for settings



0



6



C



1



7



D



2



8



E



3



9



F



4



A



X



5



B




X

Prefix & Suffix TABLE

HEX	HID (SPP)	HEX	HID (SPP)	HEX		HEX		HEX		HEX	
01	CTRL A (SOH)	19	CTRL Y (EM)	20	SPACE	38	8	50	P	68	h
02	CTRL B (STX)	1A	CTRL Z (SUB)	21	!	39	9	51	Q	69	i
03	CTRL C (ETX)	1B	ESC (ESC)	22	"	3A	:	52	R	6A	j
04	CTRL D (EOT)	1C	CTRL \ (FS)	23	#	3B	;	53	S	6B	k
05	CTRL E (ENQ)	1D	CTRL] (GS)	24	\$	3C	<	54	T	6C	l
06	CTRL F (ACK)	1E	CTRL ^ (RS)	25	%	3D	=	55	U	6D	m
07	CTRL G (BEL)	1F	CTRL _ (US)	26	&	3E	>	56	V	6E	n
08	Backspace (BS)			27	'	3F	?	57	W	6F	o
09	Tab (HT)	HEX	HID Only	28	(40	@	58	X	70	p
0A	CTRL J (LF)	80	F1	29)	41	A	59	Y	71	q
0B	CTRL K (VT)	81	F2	2A	*	42	B	5A	Z	72	r
0C	CTRL L (FF)	82	F3	2B	+	43	C	5B	[73	s
0D	Enter (CR)	83	F4	2C	,	44	D	5C	\	74	t
0E	CTRL N (SO)	84	F5	2D	-	45	E	5D]	75	u
0F	CTRL O (SI)	85	F6	2E	.	46	F	5E	^	76	v
10	CTRL P (DLE)	86	F7	2F	/	47	G	5F	_	77	w
11	CTRL Q (DC1)	87	F8	30	0	48	H	60	`	78	x
12	CTRL R (DC2)	88	F9	31	1	49	I	61	a	79	y
13	CTRL S (DC3)	89	F10	32	2	4A	J	62	b	7A	z
14	CTRL T (DC4)	8A	F11	33	3	4B	K	63	c	7B	{
15	CTRL U (NAK)	8B	F12	34	4	4C	L	64	d	7C	
16	CTRL V (SYN)			35	5	4D	M	65	e	7D	}
17	CTRL W (ETB)			36	6	4E	N	66	f	7E	~
18	CTRL X (CAN)			37	7	4F	O	67	g		

Barcode Configuration Method:

(Flow chart for setup procedure :)

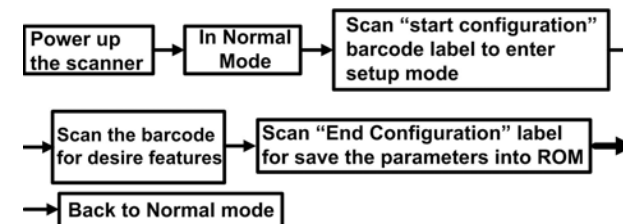

1D Symbolologies – 1



CODE 39



CODE 39 Transmit Start/Stop Character



CODE 39 FULL ASCII



EAN-8



EAN-13




Industrial 25







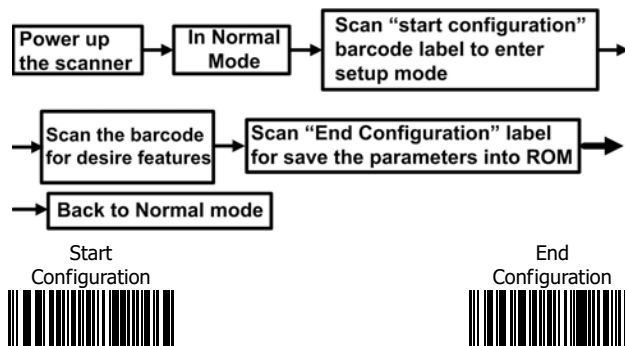







Barcode Configuration Method:



















(Flow chart for setup procedure :)



1D Symbolologies – 2

ENABLE	<u>Interleaved 25</u>	DISABLE
		
ENABLE	<u>Matrix 25</u>	DISABLE
		
ENABLE	<u>CODE 11</u>	DISABLE
		
ENABLE	<u>CODABAR</u>	DISABLE
		
ENABLE	<u>MSI</u>	DISABLE
		
ENABLE	<u>CODE 93</u>	DISABLE
		

1D Symbolologies – 3

ENABLE	<u>GS1-Databar (RSS)</u>	DISABLE
		
ENABLE	<u>GS1-Databar (RSS-Limited)</u>	DISABLE
		
ENABLE	<u>GS1-Databar (RSS-Expand)</u>	DISABLE
		
ENABLE	<u>CODE 128</u>	DISABLE
		
ENABLE	<u>GS1-128 UCC/EAN-128</u>	DISABLE
		
ENABLE	<u>ISSN</u>	DISABLE
		
ENABLE	<u>ISBN</u>	DISABLE
		
ENABLE	<u>UPC-E</u>	DISABLE
		
ENABLE	<u>UPC-A</u>	DISABLE
		



How to assemble the wearable set

(Glove, Holder, Ring Trigger cable)



1. how to assemble the glove-1



2. how to assemble the glove-2



3. Put Holder on glove (VELCRO area)



4. Put pocket scanner onto holder. (pay attention to assembling direction)



5. Connect trigger cable with pocket scanner and wear ring trigger unit. (you can use plastic hook to adjust the trigger cable.)



6. Glove set can be used for the right hand also.



7. If you want to remove pocket scanner from Glove set, you can disassemble it as per above photo.

Quick guide is subject to change without notice.

R_191108_01